

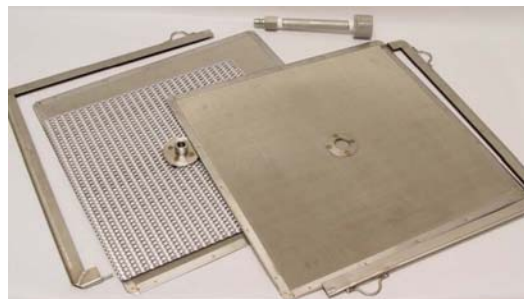


Instructions for using the GYCOR Filter Powder Pad with Metal Screen Adapters


For more information, please call GYCOR at (800) 772-0660

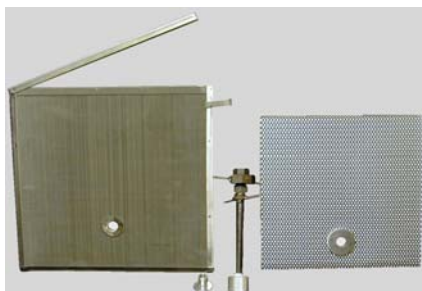


1. Remove the inner screen (baffle) from the screen adapter. Put the outer screen adapter in storage as you will no longer need it with Gycor's Filter Powder Pads.

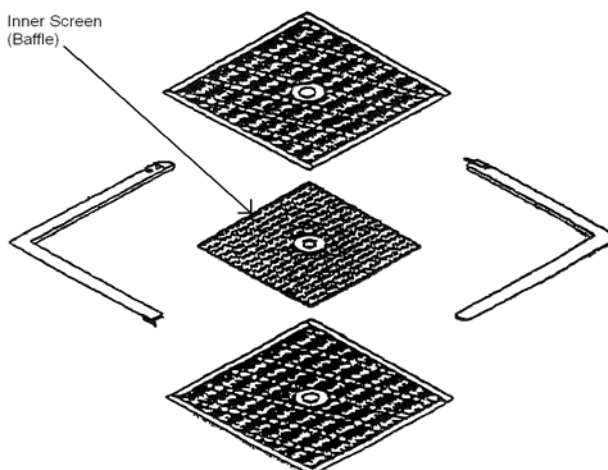

2. Place the inner screen (baffle) in the Gycor Filter Powder Pad envelope.

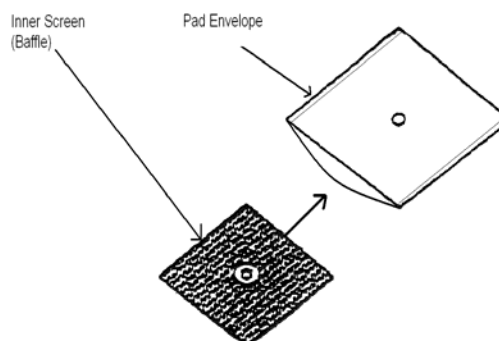

3. Fold open end of pad envelope under screen to seal it and/or secure folded open end with stainless steel clips.

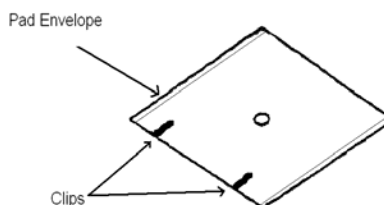

Each GYCOR Filter Powder Pad is designed to be changed daily, but can be used to filter more than once per day.