



Instructions for using the GYCOR Filter Powder Pad with SuperSorb® CarbonPads™ Adapter


For more information, please call GYCOR at (800) 772-0660

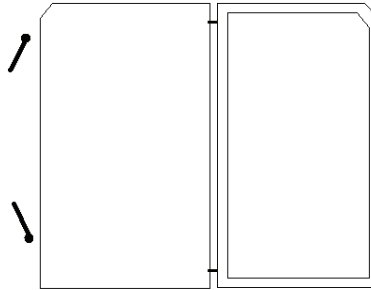


1. Insert a GYCOR Filter Powder Pad # **SA-125**
Or
SA-170 in the area that the Filtercorp SuperSorb® Carbon Pads™ normally fit.

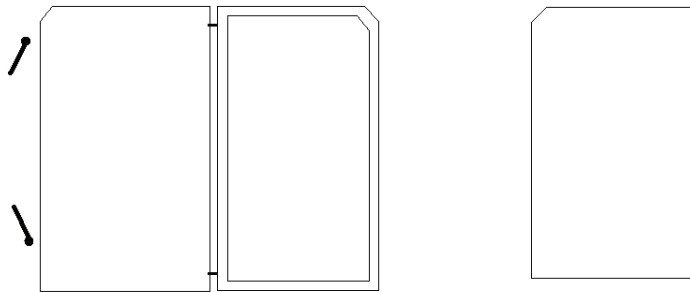

2. Place GYCOR # **G-100*** rubber gasket over the top of GYCOR Filter Powder Pad # **SA-125** or GYCOR # **G-200*** rubber gasket over the top of GYCOR Filter Powder Pad # **SA-170**.

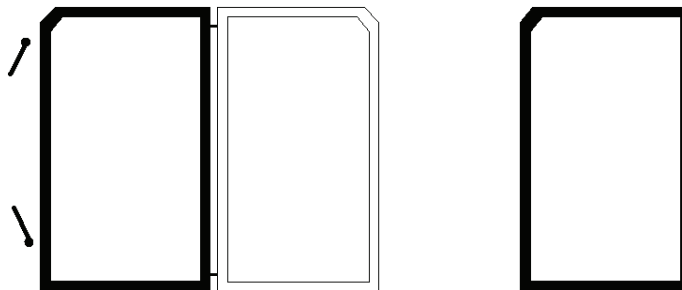

3. Close the Assembly and secure the latches.

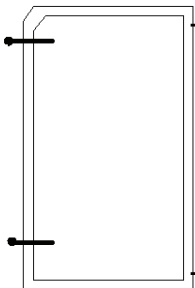

Each GYCOR Filter Powder Pad # **SA-125** & # **SA-170** is designed to be changed daily, but can be used to filter more than once per day.

* The GYCOR # **G-100** & # **G-200** gasket is designed to provide years of service.

Filtercorp and SuperSorb® CarbonPads™ are registered to Filtercorp, Inc. Fresno, CA 93706